
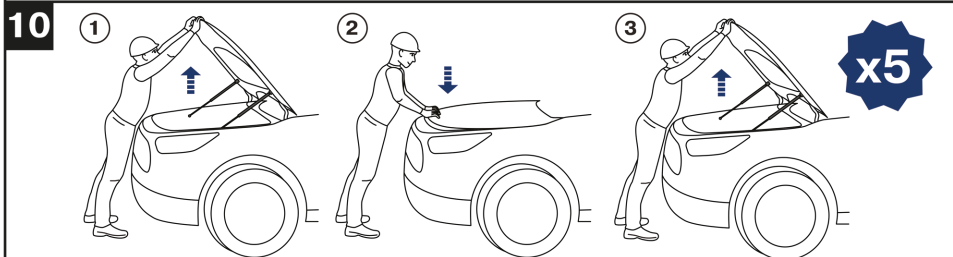
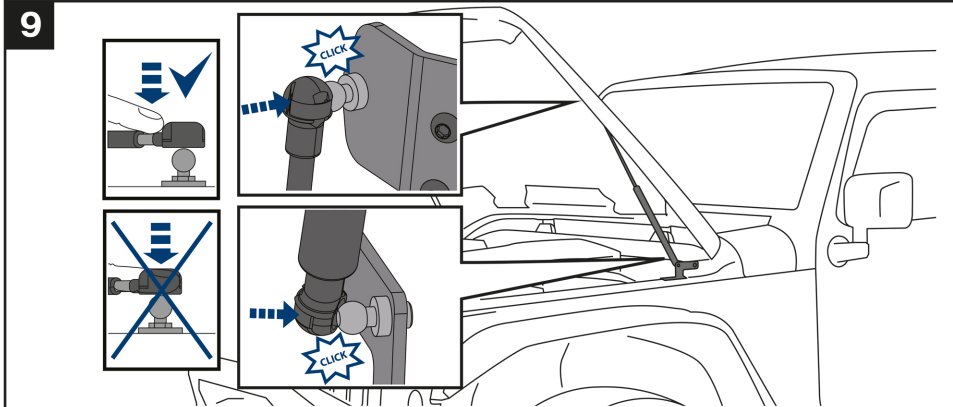


# Jeep Wrangler JK

## HOOD LIFTS Installation Instruction

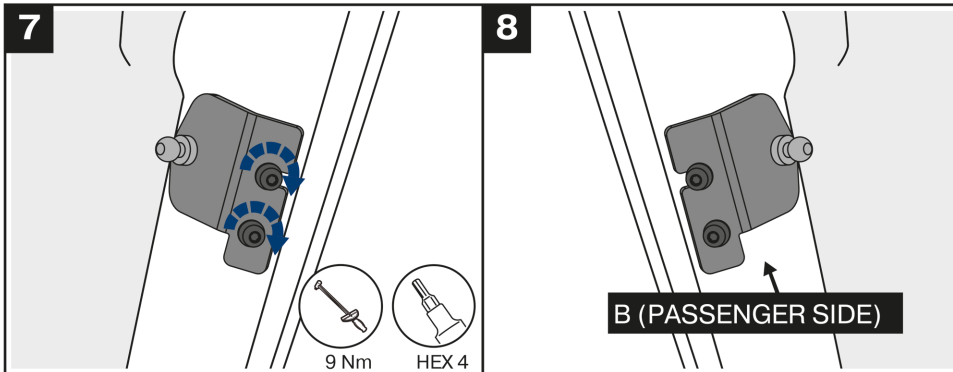

After installation, open and close smoothly the hood a few times to break in the struts for consistent operation.

**Attention!** Make sure that the gas struts and brackets don't touch the car elements. Avoid slamming the hood lid.

**Attention!** If it's needed to remove installed gas strut, disassemble how shown on the picture. Operate with the hood being totally open.

Check vehicle manual

After installation, check the correct operation of all elements.




Model year: Jeep Wrangler JK 2007-2018

Part No.: 2A.ST.2703.1


Compatibility: all types

Weight: 2.2 lbs

Installation time: 30 min

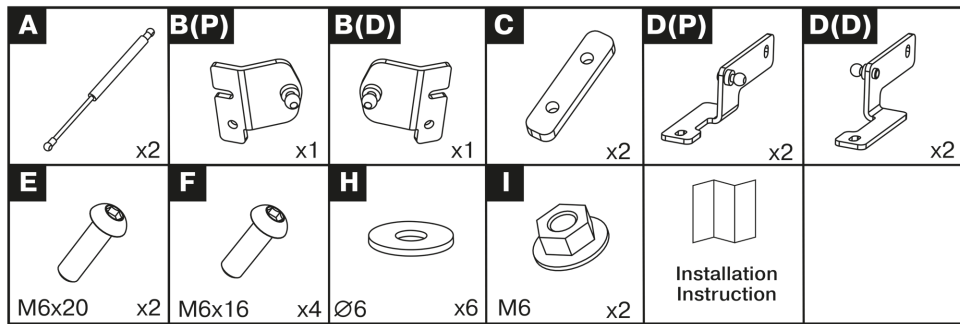

**Required Tools:**

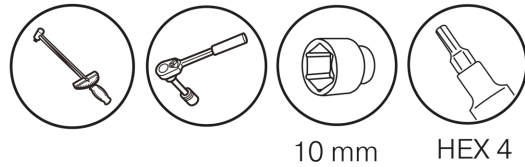

**! Attention!**

Before installation of gas struts, open the hood and check that there is no additional equipment installed in engine bay which can block installation.

